


For fx-9860G Series


E

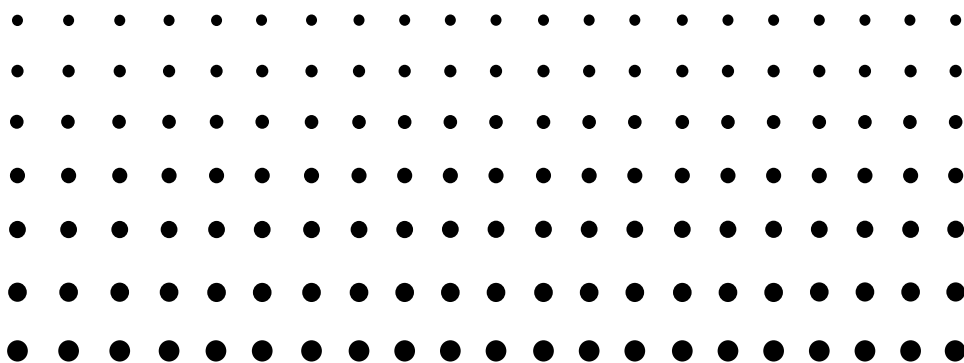

fx-9860G

Software Development Kit

Key Code List

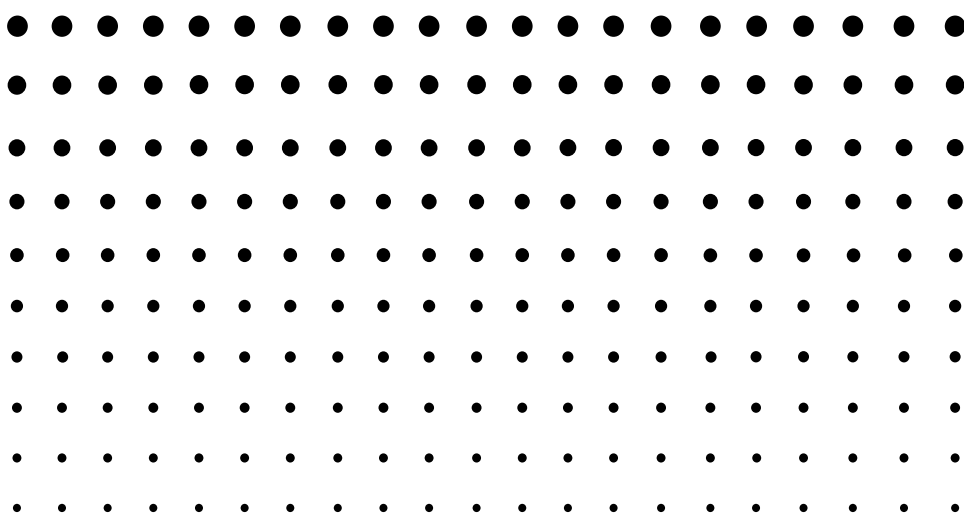































<http://world.casio.com/edu/>

CASIO®

fx-9860G SDK Key Code List

	Normal	SHIFT	ALPHA
0	KEY_CHAR_0	KEY_CHAR_IMGTRY	KEY_CHAR_Z
1	KEY_CHAR_1	KEY_CHAR_LIST	KEY_CHAR_U
2	KEY_CHAR_2	KEY_CHAR_MAT	KEY_CHAR_V
3	KEY_CHAR_3		KEY_CHAR_W
4	KEY_CHAR_4	KEY_CTRL_CATALOG	KEY_CHAR_P
5	KEY_CHAR_5		KEY_CHAR_Q
6	KEY_CHAR_6		KEY_CHAR_R
7	KEY_CHAR_7	KEY_CTRL_CAPTURE	KEY_CHAR_M
8	KEY_CHAR_8	KEY_CTRL_CLIP	KEY_CHAR_N
9	KEY_CHAR_9	KEY_CTRL_PASTE	KEY_CHAR_O
.	KEY_CHAR_DP	KEY_CHAR_EQUAL	KEY_CHAR_SPACE
EXP	KEY_CHAR_EXP	KEY_CHAR_PI	KEY_CHAR_DQUATE
(-)	KEY_CHAR_PMINUS	KEY_CHAR_ANS	
+	KEY_CHAR_PLUS	KEY_CHAR_LBRCKT	KEY_CHAR_X
-	KEY_CHAR_MINUS	KEY_CHAR_RBRCKT	KEY_CHAR_Y
X	KEY_CHAR_MULT	KEY_CHAR_LBRACE	KEY_CHAR_S
÷	KEY_CHAR_DIV	KEY_CHAR_RBRACE	KEY_CHAR_T
EXE	KEY_CTRL_EXE	KEY_CHAR_CR	
DEL	KEY_CTRL_DEL	KEY_CTRL_INS	
AC/ON	KEY_CTRL_AC		

	Normal	SHIFT	ALPHA
	KEY_CHAR_FRAC	KEY_CTRL_MIXEDFRAC	KEY_CHAR_G
	KEY_CTRL_FD	KEY_CTRL_FRACCNVRT	KEY_CHAR_H
	KEY_CHAR_LPAR	KEY_CHAR_CUBEROOT	KEY_CHAR_I
	KEY_CHAR_RPAR	KEY_CHAR_RECIP	KEY_CHAR_J
	KEY_CHAR_COMMA		KEY_CHAR_K
	KEY_CHAR_STORE		KEY_CHAR_L
	KEY_CTRL_XTT	KEY_CHAR_ANGLE	KEY_CHAR_A
	KEY_CHAR_LOG	KEY_CHAR_EXP10	KEY_CHAR_B
	KEY_CHAR_LN	KEY_CHAR_EXP	KEY_CHAR_C
	KEY_CHAR_SIN	KEY_CHAR_ASIN	KEY_CHAR_D
	KEY_CHAR_COS	KEY_CHAR_ACOS	KEY_CHAR_E
	KEY_CHAR_TAN	KEY_CHAR_ATAN	KEY_CHAR_F
	KEY_CHAR_SQUARE	KEY_CHAR_ROOT	KEY_CHAR_VALR
	KEY_CHAR_POW	KEY_CHAR_POWROOT	KEY_CHAR_THETA
	KEY_CTRL_EXIT	KEY_CTRL_QUIT	KEY_CTRL_EXIT
	KEY_CTRL_SHIFT	KEY_CTRL_SHIFT	KEY_CTRL_SHIFT
	KEY_CTRL_ALPHA	KEY_CTRL_ALPHA	KEY_CTRL_ALPHA
	KEY_CTRL_OPTN		
	KEY_CTRL_VARS	KEY_CTRL_PRGM	
	KEY_CTRL_MENU	KEY_CTRL_SETUP	
	KEY_CTRL_UP	KEY_CTRL_PAGEUP	KEY_CTRL_UP
	KEY_CTRL_DOWN	KEY_CTRL_PAGEDOWN	KEY_CTRL_DOWN
	KEY_CTRL_LEFT		KEY_CTRL_LEFT
	KEY_CTRL_RIGHT		KEY_CTRL_RIGHT
	KEY_CTRL_F1	KEY_CTRL_F1	KEY_CTRL_F1
	KEY_CTRL_F2	KEY_CTRL_F2	KEY_CTRL_F2
	KEY_CTRL_F3	KEY_CTRL_F3	KEY_CTRL_F3
	KEY_CTRL_F4	KEY_CTRL_F4	KEY_CTRL_F4
	KEY_CTRL_F5	KEY_CTRL_F5	KEY_CTRL_F5
	KEY_CTRL_F6	KEY_CTRL_F6	KEY_CTRL_F6

CASIO®

CASIO COMPUTER CO., LTD.

6-2, Hon-machi 1-chome
Shibuya-ku, Tokyo 151-8543, Japan